



# i-ALERT™ Condition Monitor (CM) Quick Reference

**⚠ WARNING:** Never operate this equipment without guarding properly installed. Never heat CM to temperatures in excess of 300°F (149°C). Never expose CM to open flame. Entanglement, high temperatures or flames could result in serious personal injury or death.

**⚠ NOTICE:** Always reset CM when the pump is started after maintenance, system change, or down-time. Failure to do so may result in false baseline levels that could cause CM to alert in error.

**⚠ NOTICE:** Be careful when using magnetic devices (such as magnetic vibration monitoring probes or magnetic bases for indicators) in close proximity to the CM. Magnetic devices can accidentally activate or deactivate the CM resulting in improper alarm levels or loss of monitoring.

For more detailed information, refer to i-ALERT™ Condition Monitor Installation, Operation and Maintenance Manual P2000642, available at [www.bellgossett.com](http://www.bellgossett.com)

## Installation of Condition Monitor

1. Place i-ALERT™ Condition Monitor on the pump bearing frame pad.
2. Insert 1/4-28 button head screw and torque to 6lb-ft (8 N-m).

## Activation of Condition Monitor

1. Assure pump is running and has reached steady flow and pressure. This process normally takes only a few minutes.
2. Place a small magnet on the CM over the ITT logo for approximately one second, then remove the magnet. Activation is indicated by a series of flashes of the red LEDs.

## Routine operation of Condition Monitor

**Normal:** The green LED on the CM will blink approximately every five seconds to indicate proper levels and adequate battery power.

**Alarm mode:** If either vibration or temperature limits are exceeded over a period of ten-minutes, the CM enters alarm mode. The CM indicates improper pump operation with two red flashing LEDs at two-second intervals (alarm mode). When the CM is in alarm mode, the cause of the condition should be investigated and necessary corrections made in a timely manner.

## Deactivation of Condition Monitor

1. Place a small magnet on the CM over the ITT logo until the red LEDs blink three times (10-15 seconds if in normal operating mode; approximately five seconds if in alarm mode).
2. Remove the magnet.
3. If successful, red LEDs will illuminate for approximately two seconds.

## Reset Condition Monitor

If CM is operating, deactivate as described in the Deactivation of Condition Monitor section. Reset CM by activating as described in the Activation of Condition Monitor section.

## Software License Agreement

**BY USING THE i-ALERT™ CONDITION MONITOR, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.**

ITT Corporation and its subsidiaries, affiliates, either directly, or through its authorized sublicensees ("ITT") grants you a limited, non-exclusive license to use the software embedded in this device ("Software") in binary executable form in the normal operation of the i-ALERT™ condition monitor for monitoring the condition of **B&G pump series 1510 (and associated models) and all brands of series eSV pumps**. Title, ownership rights, and intellectual property rights in and to the Software remain in ITT or its third-party providers. You agree that this license agreement does not need to be signed for it to take effect.

You acknowledge that this Software is the property of ITT and is protected under United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of ITT and/or its third-party providers and that the Software in source code form remains a valuable trade secret of ITT. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

i-ALERT is a registered trademark of ITT and is used under license.



Xylem Inc.  
8200 N. Austin Avenue  
Morton Grove, Illinois 60053  
Phone: (847) 966-3700  
Fax: (847) 965-8379  
[www.xylem.com/brands/bellgossett](http://www.xylem.com/brands/bellgossett)

Bell & Gossett is a trademark of Xylem Inc. or one of its subsidiaries.  
© 2012 Xylem, Inc. P2000643R2 December 2012  
© 2012 ITT Corporation and its subsidiaries.