


Steps for Setting up 2 (or more) Communicating Aquavar CPC Drives

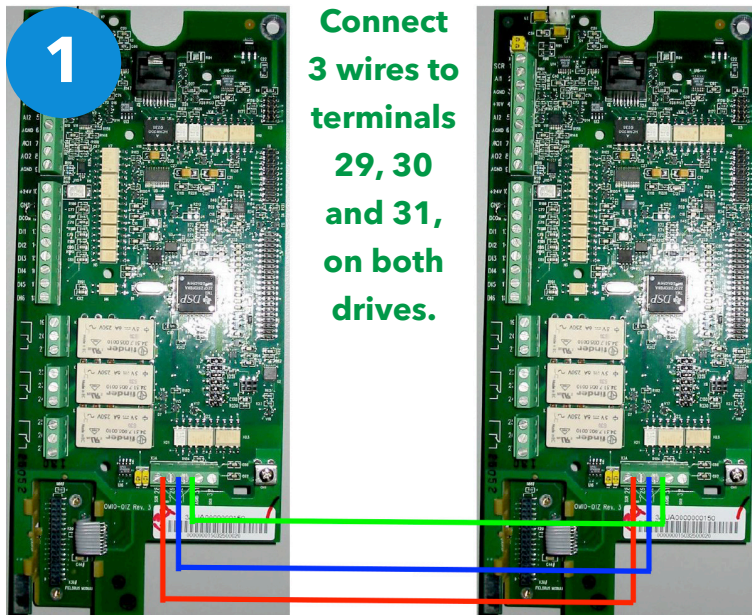

1 Connect 3 wires to terminals 29, 30 and 31, on both drives.

(Recommend 22AWG 3 or 4 wire shielded cable)

3 Repeat Step 2 on the second drive

4 On the second drive, Exit out to Groups:

Go to Group 22
Parameter 2207
(Pump Address)
Change value to 2



2 On the Keypad of the first drive, go to:

- Menu
- Parameters
- Group 11
- Parameter 1102
(Application macro)
- Change to : Multicontrol



Notes:

Repeat Steps 3 and 4 for (up to 2) additional drives as needed.

These simple instructions are in addition to the basic wiring and programming used for setting up individual drives.

For expanded detail of Aquavar CPC setup and capabilities, refer to IM167, Aquavar CPC Instruction and Operation manual.