


# Recommended Installation Layout

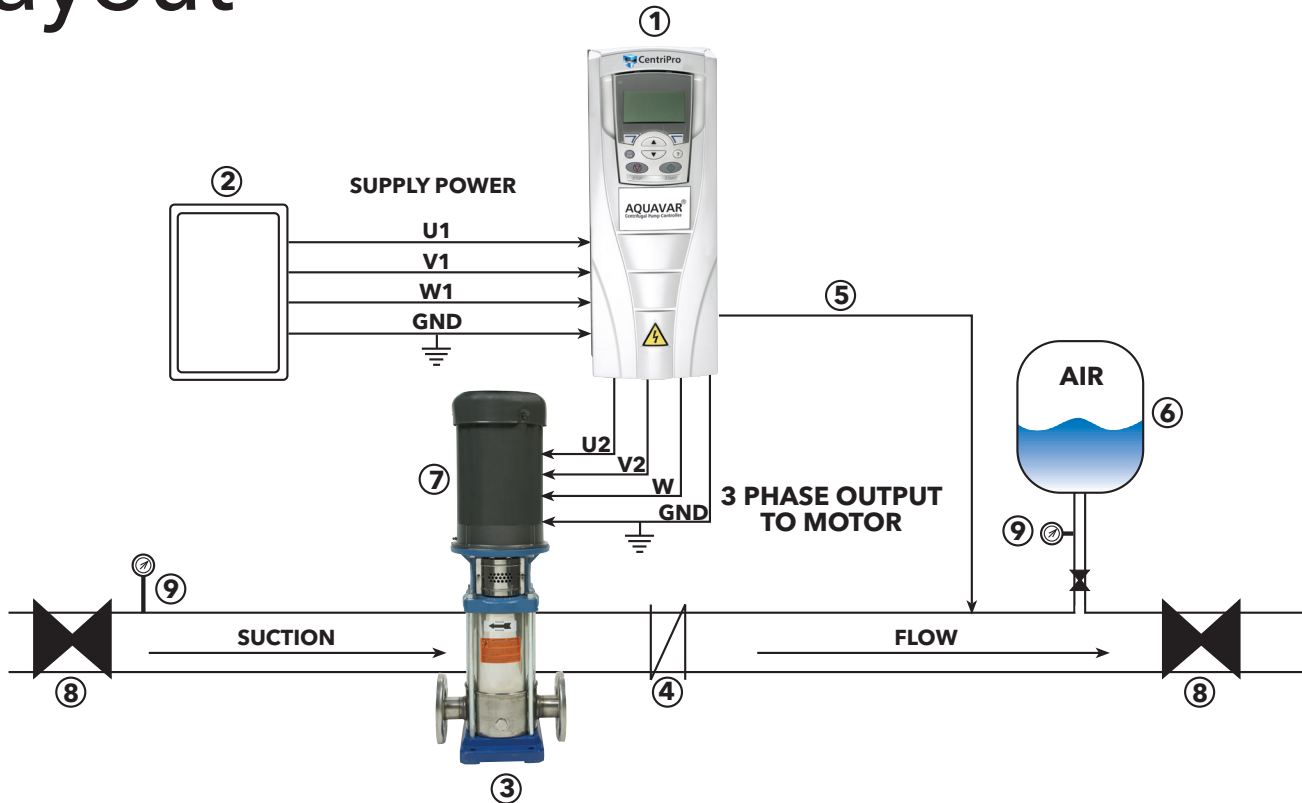

- |  |                           |
|--|---------------------------|
| ① AQUAVAR CPC                          | ⑥ AIR BLADDER TANK        |
| ② FUSIBLE DISCONNECT                   | ⑦ 3 PHASE MOTOR           |
| ③ CENTRIFUGAL PUMP                     | ⑧ GATE VALVE (BALL VALVE) |
| ④ CHECK VALVE                          | ⑨ PRESSURE GAUGE          |
| ⑤ PRESSURE TRANSDUCER (CABLE ASSEMBLY) |                           |

**NOTES:** A. Use of load filter (reactor) should be used between the Aquavar and motor, if motor leads exceed 60 wire feet.

B. If single phase power is supplied on 200 - 240 volt three phase units, use U1 and W1 as input terminals from single phase supply, and de-rate unit by 50% of three phase rating.

## Xylem Inc.

2881 East Bayard Street Ext., Suite A, Seneca Falls, NY 13148

Phone: (800) 453-6777 Fax: (888) 322-5877

[www.centripro.com](http://www.centripro.com)