


Remote Flow Sensor

Connect the remote flow sensor to the flow converter with the included cable (part number 691080).


Important: Do not use other cable types!

Important: Terminals 1 and 4 must be shunted!

The extension cable length between converter and sensor must under normal circumstances not exceed 50 meters. Power lines running in parallel and noisy environments may reduce the max. length to less than 50 meters. Consult MJK personnel for advice and guidance.

Remote Flow Sensor			691080	
Terminal	Signal	Designation	Colour before March 2011	Colour from March 2011
1 	Liquid GND	Shield	-	-
2	E1	Wire pair no. 1	Red	Red
3	E2	Wire pair no. 1	White	White
4	GND	Wire pair no. 3	Black	Black
5	L1	Wire pair no. 2	Green	Blue
6	L2	Wire pair no. 2	White	Brown
7, 8 and 9	not used			

Converter Connection Board - Local

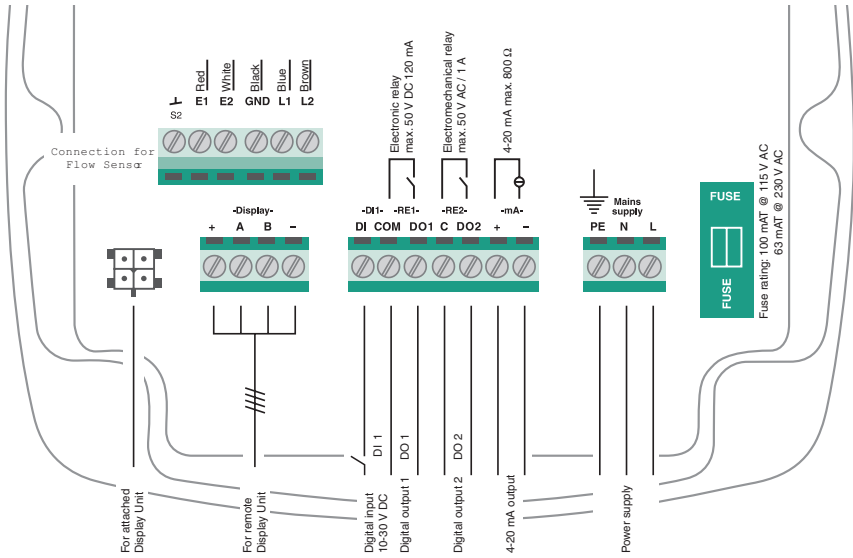

Converter Connection Board - Remote

